

New Holland Boomer™ 1000 & T1000 Series Sub-compact Tractor Specifications



Boomer 1020 Boomer 1025 T1010 T1030

MODEL	Boomer 1020/T1010	Boomer 1025/T1030
ENGINE		
Gross engine hp (kW)	20 (14.9)	26 (19.4)
PTO hp (kW)	15.5 (11.6)	19.7 (14.7)
Rated speed, rpm	3000	3000
Cylinders	3	3
Displacement, cu. in. (L)	58.2 (.95)	69.0 (1.1)
Fuel capacity, gal. (L)	7.1 (26.9)	7.1 (26.9)
TRANSMISSIONS		
Hydrostatic transmission	2-speed	2-speed
Min/Max forward speed with R4 tires, mph (k/hr)	0-10.3 (16.6)	0-10.3 (16.6)
BRAKES		
LocationSingle LH side	
TypeWet disc	
POWER TAKE OFF (PTO)		
Rear	540	540
Mid	2200	2200
HYDRAULICS		
Pump type	Gear	Gear
System typeOpen center	
Pump capacity, gpm (lpm)*	5.6 (21.2)	5.6 (21.2)
Implement flow, gpm (lpm)	3.75 (14.20)	3.75 (14.21)
Steering priority flow, gpm (lpm)	1.85 (7.0)	1.85 (7.0)
3-point hitch lift capacity, 24 in. behind the lift balls, lb. (kg)	700 (318)	700 (318)
3 point hitch controlSelf centering valve	
*@ rated speed		
AXLE OPTIONS		
FWD	Standard	Standard
Sensitrak™ Auto FWD	NA	Optional
DIMENSIONS (with R4 tires)		
Overall length with 3-point hitch, in. (mm)	96.3 (2445)	96.3 (2445)
Overall width (minimum), in. (mm)	46.4 (1180)	46.4 (1180)
Wheelbase, in. (mm)	55.1 (1400)	55.1 (1400)
Height to top of ROPS, in. (mm)	72.4 (1840)	72.4 (1840)
Ground clearance	7.3 (185)	7.3 (185)
Shipping weight w/R4 tires, lbs. (kg)	1455 (660)	1455 (660)
TIRE OPTIONS		
Turf Tires		
Front18x8.5-8, 4 PR (R3) Turf	
Rear26x12-12, 4 PR (R3) Turf	
Industrial Tires		
Front18x8.5-8, 4 Pr (R4) Ind	
Rear26x12-12, 4PR (R4) Ind	

- STANDARD EQUIPMENT:**
- Toolbox
 - Cup holder
 - Foldable ROPS
 - 12 Volt accessory power outlet

- OPTIONAL EQUIPMENT:**
- FRONT ATTACHMENTS**
- Loader
 - Quick-attach snow blower
 - Quick-attach rotary broom
 - Quick-attach front blade

- MID-MOUNT ATTACHMENTS**
- 60" mid-mount mower
 - Grass catcher

- REAR ATTACHMENTS**
- Finishing mowers
 - Rotary tiller
 - Ballast box

Visit our Web site at www.newholland.com/na. Or, call toll-free **866-NEW-HLND (866-639-4563)**.

Design, materials and/or specifications are subject to change without notice and without liability therefor. Specifications are applicable to units sold in Canada, the United States, its territories and possessions, and may vary outside these areas.



Safety begins with a thorough understanding of the equipment. Always make sure you and your operators read the Operator's Manual before using the equipment. Pay close attention to all safety and operating decals and never operate machinery without all shields, protective devices and structures in place.